


ALV2P (regular) and ALV2S (slim)

- Handle Assembly




Installing the handle to the escutcheon

1. Prepare the escutcheon and the handle with the nut set.

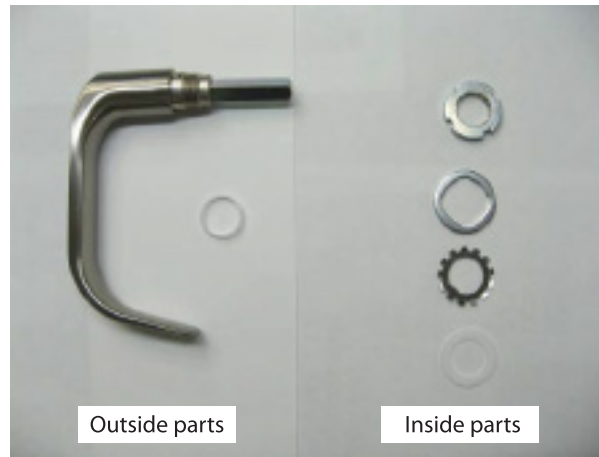



2. Install bush to the handle as follows.

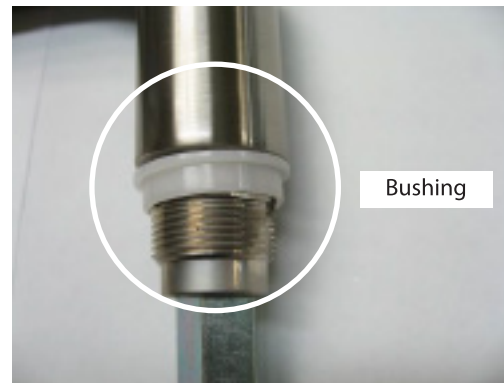


3. Install the handle with bushing to the escutcheon.




4. Install remaining parts of nut set to escutcheon with handle.

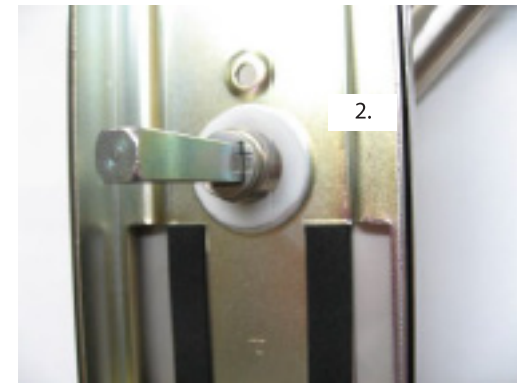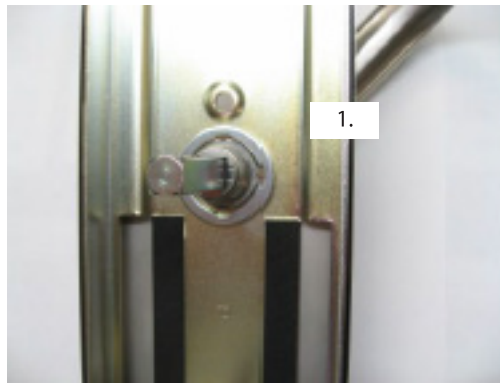

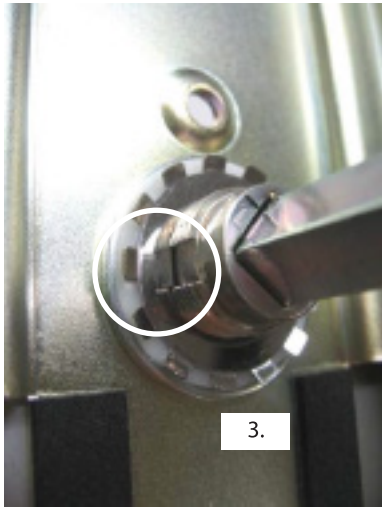

Match the tab to the slot.

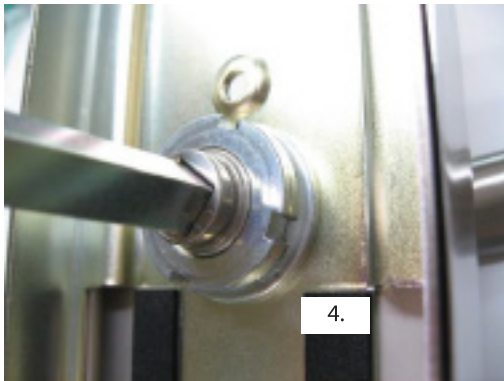

Bend the tab with a small flat-bladed screwdriver and lock the nut in place.

